

CA001

Basic Manual

READ THIS MANUAL TO MASTER
THE CELLULAR PHONE

www.au.kddi.com

Illustrations and
Screenshots
in This Manual

Notes on
Cell Phone Use

Contents

Getting Ready

Making and
Answering Calls

Global Functions

Character Input

Phone Book

Pair Function

Mail

Camera

EZweb

EZ News Flash/
au one Gadget

EZ Navi

TV (1Seg)

In Case of Loss
of Your CA001

Troubleshooting

Index

Introduction

Thank you for purchasing the CA001. Before using your CA001, be sure to read the CA001 Basic Manual (this PDF manual) to ensure correct usage. After you have finished reading this manual, store this PDF manual and the printed manuals in safe places so you can retrieve them whenever you need them.

Manuals for the CA001

The CA001 comes with the Basic Manual and Instruction Manual.

● For learning the basics:

Read the CA001 Basic Manual (this manual).

● For learning details on using each function:

Read the supplied CA001 Instruction Manual (Japanese). Be sure to read the Safety Precautions “安全上のご注意” to ensure proper usage of the CA001.

The keyword searchable au Online Manual is also available on the au homepage:
<http://www.au.kddi.com/manual/index.html>

- To access from EZweb:  ⇒ *au one Top* ⇒ *auお客さまサポート* (au Customer Support) ⇒ *オンラインマニュアル* (Online Manual)


Scan this QR code to access the au Online Manual. ▶



Illustrations and Screenshots in This Manual

Note on Illustrations

The illustrations in this manual may look different from the actual cell phone in shape, color and typeface. The key illustrations are also simplified as shown below.

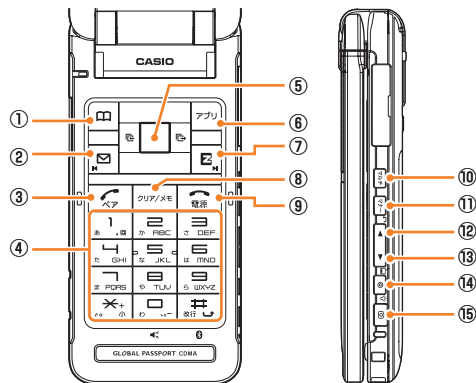

	Key Illustration		Key Illustration
①		⑦	
②		⑧	クリア/メモ
③		⑨	
④		⑩	マルチ
		⑪	マナー
		⑫	
		⑬	
⑤		⑭	
⑥		⑮	

Note on Screenshots

The screenshots in this manual are simplified and may look different from the actual cell phone screens.

- The display design themes of the CA001 vary by model color. The screenshots for the Yellow models are used in this manual.

Notes on Cell Phone Use

Cell Phone Etiquette

The cell phone always emits weak radio waves when power is on.

Use the cell phone in an enjoyable and safe manner without forgetting to be considerate of others around you.

- **Use of cell phones is not allowed in some places.**
 - Do not use the cell phone while you are driving. Doing so is both dangerous and prohibited by law.
 - Using a cell phone in an aircraft is prohibited by law. Be sure to turn the cell phone off.
- **Radio waves from cell phones may interfere with medical electrical equipment.**
 - Some people close to you in crowded places such as packed trains may be using a cardiac pacemaker. Turn the cell phone off in such places.
 - Abide by the rules of hospitals and other medical institutions where it is forbidden to use or carry cell phones.
- **Be considerate of where you use the cell phone and how loudly you talk.**
 - Do not make calls in theaters, museums, libraries, and other similar places. Turn power off or turn on manner mode not to disturb others around you by ring tones.
 - Do not use the cell phone on a street where you might interrupt the flow of pedestrians.
 - Move to areas where you will not inconvenience others on trains or in hotel lobbies.
 - Refrain from talking in a loud voice.

- Obtain the permission of other people before you take their photos with the cell phone's camera.
- Do not record information with the cell phone's camera in bookstores and other locations where taking photos is not permitted.

Do Not Use the Cell Phone While Driving!

Turn off your cell phone or put it in Drive Mode while driving.

 


Do not use the cell phone while driving a car/motorcycle or riding a bicycle. It may result in a traffic accident. Using a cell phone while driving is prohibited by law. Using a cell phone while riding a bicycle may also be punishable by law.

Prohibited!

- Looking at a cell phone display
- Talking on a cell phone while holding it

Drive Mode

In Drive Mode, a Japanese message meaning "I'm driving now, so I can't answer your call." is played when a call is received, and asks the caller to leave a message on the answer memo.

When the standby screen is displayed, press , use  to select *Drive*, and then press  (Set).

Disaster Message Board Service

When a big scale disaster occurs, you can register your safety information from EZweb. The registered information can be referred from anywhere in Japan from EZweb or Internet.


Registering safety information

- When a big scale disaster occurs, from an au phone, you can register your safety information (i.e. your condition and comments) to the 災害用伝言板 (Disaster Message Board) created on the EZweb.
- After registration of your safety information, e-mail is sent to your family or acquaintances you have previously designated to notify that your safety information has been uploaded to the 災害用伝言板 (Disaster Message Board).

Inquiring for safety information

- You can inquire for safety information of a person by entering his/her phone number from EZweb or Internet.*
* To inquire from other carriers' cell phone, a PHS or PC, access "<http://dengon.ezweb.ne.jp/>".

Access	 ⇒ au one Top ⇒ 災害用伝言板 (Disaster Message Board)
	http://dengon.ezweb.ne.jp/

- The maximum storage period of the registered information is 72 hours.
- The maximum available number of registrations is 10 per phone number. When the number of registrations exceeds 10, the oldest one is overwritten.
- The demonstration of this service can be referred to anytime by pressing  ⇒ au one Top ⇒ auお客様サポート (au Customer Support) ⇒ 調べる (Search) ⇒ 災害用伝言板 (デモ版) (Disaster Message Board (Demo Version)).
- To view the Disaster Message Board in English, select *English* from the top menu of the Disaster Message Board.

Contents

Introduction

Illustrations and Screenshots in This Manual 1

Notes on Cell Phone Use 2

Cell Phone Etiquette	2
Do Not Use the Cell Phone While Driving!.....	2
Disaster Message Board Service	3

Contents 4

Getting Ready 6

Checking the Contents of the Box	6
Names of Parts	7
Position of CA001	8
Charging the Battery Pack	9
Learning the Basics	10
Turning On Power	11
Switching the Display Language to English	11
Initial Setup of E-mail and EZweb	11
Checking Your Phone Number and E-mail Address ...	11
Display Indicators	12
Using Main Menu	13
Changing Your E-mail Address	15
Security Code and Passwords	16
Using CA001 in Viewfinder Position	17

Making and Answering Calls 21

Making a Call	21
Making an International Call.....	21
Answering a Call	22
Returning a Call (Outgoing History/Incoming History) ...	23
One-ring Calls.....	23
Adjusting the Earpiece Volume during a Call	23
Turning On Manner Mode	23
Changing the Incoming Ring Tone	24
Adjusting the Incoming Ring Tone Volume	24
Turning On the Answer Memo	25

Global Functions 26

Setting Area	26
Calling to Japan from Overseas	26

Character Input 27

Character Entry Modes	27
Entering Alphanumeric Characters	27
Entering E-mail Addresses	28
Entering Pictograms	29

Phone Book 30

Saving a Phone Book Entry	30
Dialing from the Phone Book	30
Editing Phone Book Entries	30
Saving a Phone Number from the Incoming or Outgoing History	31



Pair Function	32	EZ News Flash/au one Gadget	43
Registering a Pair Partner	32	Basic Operations	43
Making a Call to a Pair Partner	32	Setting EZ News Flash	43
Sending Mail to a Pair Partner	32		
Mail	33	EZ Navi	45
Using E-mail	33	Passenger Seat Navi for People in the Passenger Seat to Check the Route	45
Creating and Sending E-mail Messages	33	Security Navi to Check Where Your Kids Are	45
Reading Received E-mail Messages	34	EZ Navi Walk for When You Go Out	46
Reading an E-mail Message with an Attached Photo or Movie	34	Evacuate Navi to Guide You Home or to Nearby Evacuation Areas during Disasters	47
Replying to Received E-mail Messages	34		
Rejecting Spam	35	TV (1Seg)	48
Using C-mail	36	Initial Setup of au Media Tuner	49
Creating and Sending C-mail Messages	36	Watching TV (1Seg)	49
Reading Received C-mail Messages	36	Basic Operations	50
		Watching TV (1Seg) in Viewfinder Position	50
		Exiting the au Media Tuner	51
Camera	37		
Photo Taking Tips	37	In Case of Loss of Your CA001	52
About Photo Modes	37	Setting Conditions for Activating the Remote Ctrl Lock	52
Taking a Photo	37	Remotely Activating the Remote Ctrl Lock on Your CA001 ...	52
Taking a Photo in Viewfinder Position	38	Activating the Remote Ctrl Lock by the Security Lock Service	53
Viewing Photos	38		
EZweb	39	Troubleshooting	54
Accessing Sites	40		
Bookmarking Frequently Accessed Pages	41	Index	56
Viewing Bookmarked Pages	41		
Checking Charges	42		
Downloading Chaku-Uta-Full®/Chaku-Uta®	42		

Getting Ready

Checking the Contents of the Box

The box contains the cell phone and accessories.

- Cell phone
- Battery pack

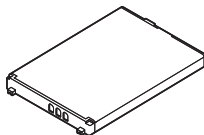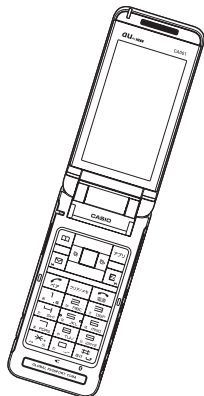

- CD-ROM
- Instruction Manual (Japanese)
- Warranty (Japanese)
- Safety Precautions (Japanese)
- Global Passport CDMA Owner's Guide (Japanese)
- Osafu-Keitai® Guide (Japanese)
- JIBUN BANK Launcher Operation Guide (Japanese)


- The following accessories are not included.

- | | | |
|-----------------------|------------------------------------|-------------------|
| - microSD memory card | - Desktop holder | - AC adapter |
| - USB cable | - Earphone jack conversion adapter | - Stereo earphone |


Purchase a common AC adapter 01/02 (sold separately).

Names of Parts


From the Front

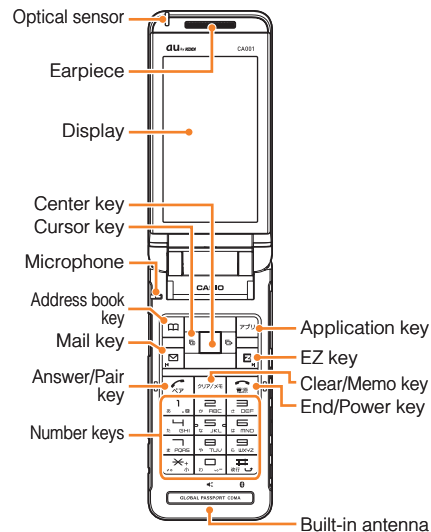

From the Back

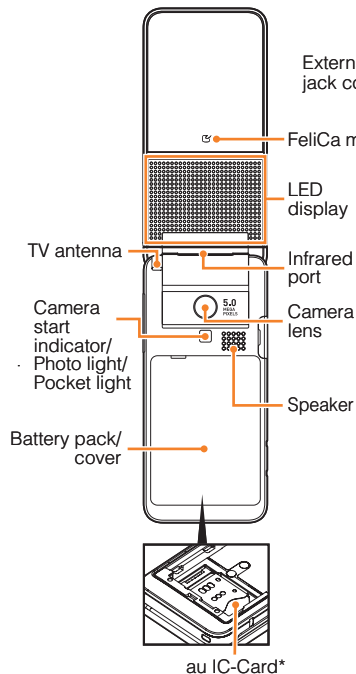

From the Sides

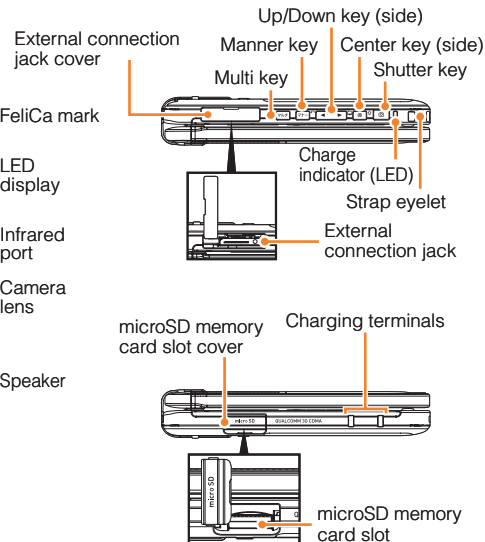


* Do not remove this card unnecessarily as your phone number is recorded on it.

Position of CA001


CA001 can not only be opened with the display facing inside, but also it can be used in Viewfinder position or Self-portrait position.

Viewfinder Position

- ➔ **Open the cell phone so that the display stands at 90 degrees (1-1), and rotate it 180 degrees clockwise (1-2).**

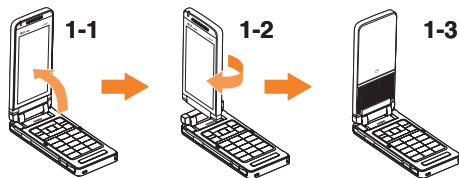

- ➔ **Close the cell phone.**

 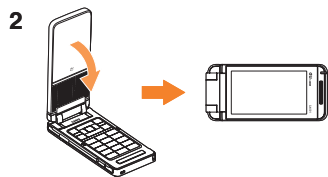


- In Illustration 1-1, rotate the display in the directions of the arrows. Do not try to rotate the display when it is not in the position that Illustration 1-1 shows, or do not rotate the display over 180 degrees. Excess pressure may cause a malfunction.

- When the cell phone is in the position that Illustration 1-2 shows, do not operate the CA001 or open/close the display with force.
- To avoid an error, keep your fingers away from the keys when you are changing the position.
- Keep the display facing inside and closed when you carry the cell phone in your pocket or bag.
- The operating procedures in this manual apply when the cell phone is open and the display is facing inside, unless the cell phone's position is specified.
- To operate in Viewfinder position, press the side keys (マルチ マナー ◀ ▶ 🔍 📷) and tap the Touch panel. For more information about how to operate the Touch panel, see "Using CA001 in Viewfinder position" on page 17.
- By default, the Touch menu appears when you set the cell phone to Viewfinder position. For more information about the Touch menu, see "Using the Touch Menu" on page 20.

Self-portrait Position


Open the display in Illustration 2 of "Viewfinder Position" (illustrated to the left) to set CA001 to Self-portrait position. When the cell phone is in Self-portrait position, you can take a photo with the lens facing toward yourself.



Charging the Battery Pack

The battery pack is not fully charged at the time of purchase. Be sure to charge the battery pack before using the cell phone for the first time.

- An AC adapter is not included. Purchase a common AC adapter 01/02 (sold separately).

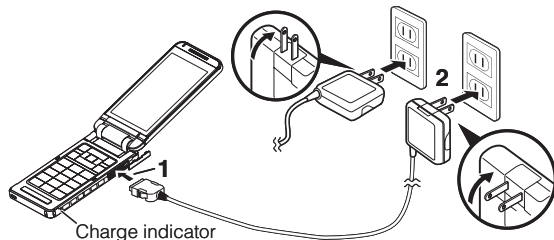

➔ Connect the common AC adapter 01/02 to the CA001.

- Check the shape of the connector of the common AC adapter 01/02 and then plug it straight into the power terminal of the CA001.

➔ Unfold the power plug of the common AC adapter 01/02 and plug it into a 100 V AC power outlet.

➔ Confirm that the charge indicator lights.

- Charging: A charge beginning sounds and the charge indicator lights.
- Charging finished: A charge completion sounds and the charge indicator goes out.

Learning the Basics

 
Key Assignments


 : Display Incoming History.

 : Display Alert window/Shortcut menu.


 : Use Phone Book.

 : Send/receive e-mail/c-mail.

 : Set/cancel Answer memo.
Delete characters.
Cancel operation.

 : Make/answer calls.
Use the Pair function.




 : Display the ticker field, info pane and gadget (setting) icon.





 : Display Outgoing History.


 : Display Main menu.

 : Activate EZapps.

 : Display EZ Service menu.

 : Turn power on/off.
End call/communication.
Cancel operation.

 ~    :
Input phone numbers and characters.

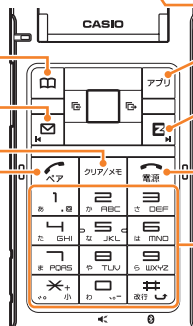


Side Key Assignments

  : Page scroll at browser display.

 : Display multi play window.

 : Set/cancel manner mode.





 : Activate au Media Tuner.
(hold down for at least one second)



 
 : Shutter when shooting photo.

 : Activate Pocket light.
(hold down for at least one second)

For details on side key assignments, see page 18.

- If you lose track of where you are or if you make a mistake, press  to return to the previous screen. Return to the standby screen by holding down  for at least one second.


Hiding/Redisplaying the Alert Window

When the alert window is displayed on the standby screen, you can temporarily hide it by pressing  (Back) and then display the Main menu by pressing . To redisplay the hidden alert window, press  when the standby screen is displayed.




Turning On Power

Hold down  for at least a few seconds.

- You cannot receive or make calls if  (out of range indicator) is displayed.

Turning Off Power

When the standby screen is displayed, hold down  for at least one second.

Switching the Display Language to English

You can switch the display language for function names and other items to English.

When the standby screen is displayed, press .

- ➔ Use  to select 機能 (Function) and then press  (選択 [Select]).

- ➔ Use  to select 画面表示 (Screen Display) and then press  (選択 [Select]).

- ➔ Use  to select Set Language and then press  (選択 [Select]).

- ➔ Use  to select English and then press  (Set).

Initial Setup of E-mail and EZweb

To use e-mail and EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center.

Also, before use, you need to configure initial settings. Your e-mail address is assigned automatically in the initial setup.


 
When the standby screen is displayed, press .

- ➔ Press  (OK).

After a short while, your e-mail address is displayed.

- ➔ Press  (OK).

The initial settings are complete.

- You can also configure initial settings by pressing  or .

Checking Your Phone Number and E-mail Address

When the standby screen is displayed, press  and then .

Display Indicators

Display indicators inform you of mail arrival, current settings, etc.

 
 



 
Display




Indicator		Description
①		Signal strength
②		Battery level
③		A microSD memory card (commercially available) inserted
④		During a call
⑤		au Media Tuner activated
⑥		EZapps activated
⑦		Connecting to EZweb
⑧		Receiving EZ News Flash information
⑨		Missed calls
⑩		New or unread e-mail/c-mail
⑪	4/16 10:10	Current date and time
⑫	—	Ticker field
⑬	—	Search window
⑭	—	Info pane
⑮	—	Alert icon
⑯		Shortcut menu
⑰		Auto Lock/Side key disable feature on
⑱		Manner mode set
⑲		Answer memo or manner mode set

LED display

The condition of CA001 is indicated by the icon on the LED display. Also, animation will be shown in situations such as receiving a call or mail, when it gets to alarm time, and so on.

Pressing the side key (, , , , , ) with the main unit closed displays the time for about five seconds. Each time you press the side key, the display indicating the condition of CA001 switches in the following order.

- Only the time icon will be indicated except when the standby screen is displayed.

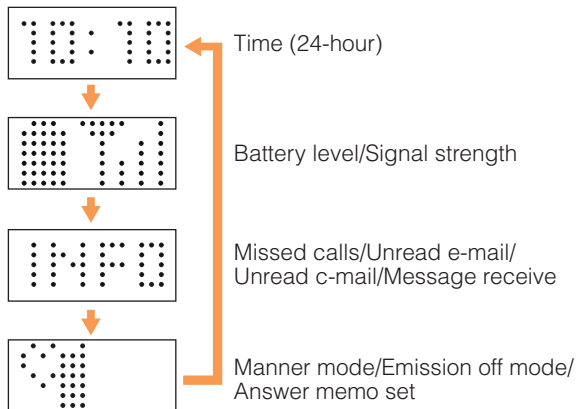

Using Main Menu

You can access various functions from the Main menu. The Main menu patterns vary by model color. The screenshots for the Yellow models are used in this manual.


Model Color	Main Menu Pattern
White	Basic
Yellow	Penguin Sports
Brown	Journey & Music

Each Main menu pattern has a different set of items.

Basic	Penguin Sports	Journey & Music	Simple
			
microSD	Run&Walk	LISMO Player	Camera
Data Folder	trainer	Music Search	LISMO Player
GLOBAL Function	Run&Walk Setup	au one Music	TV
Function	Sports Timer	Uta-tomo	Data Folder
TV	DailyLife	au Records	microSD
Camera	Function	EZ Machi-Uta	JIBUN BANK
LISMO Player	LISMO Player	Camera	Settings
Watch/Calendar	Camera	TV	Accessories
JIBUN BANK	TV	Data Folder	
EZ FeliCa	Data Folder	Touch Session	
Infrared Comm	microSD	Function	
Accessories	Accessories	Accessories	



Changing Your E-mail Address

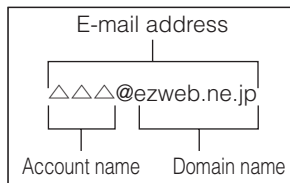You can change the account name of your e-mail address.





When the standby screen is displayed, press .

➔ Use  to select *E-mail Setup* and then press .

➔ Use  to select *Other* and then press .



The cell phone connects to the server.



➔ Use  to select *Eメールアドレスの変更* (Change E-mail Address) and then press .




➔ Use  to select the entry box, press , enter your security code, and then press .

- Your security code is the four-digit number you wrote on your subscription form.



- If the security code is incorrectly entered three times consecutively during a single day, the e-mail address change operation will be disabled until the next day.

➔ Use  to select *送信* (Send) and then press .


➔ Use  to select *承諾する* (Accept) and then press .

➔ Use  to select the entry box, press , enter an e-mail address using single-byte alphanumeric characters, and then press .

- For details on entering e-mail addresses, see page 28.

➔ Use  to select *送信* (Send) and then press .

➔ Use  to select *OK*, press , and then press .

- Check that the e-mail address has been updated before pressing .

- Your e-mail address cannot be changed if the new address you enter in the above procedure is already being used. In this case, enter a different e-mail address.

Security Code and Passwords

You can use a security code and other passwords described below.

Take care not to forget your security code and passwords, because they are required for performing various operations and using subscription services.

Security Code

Usage Example	①Using the Answering Service (Voice Mail) and Call Transfer remotely from a fixed-line phone ②Making inquiries, applications, and changes while using au Customer Service Center voice guidance, au web pages, and EZweb ③Changing the settings of <i>Mail Filter</i> or <i>Other</i> under E-mail Setup
Initial Setting	The four-digit number you wrote on your subscription form

Lock No.

Usage Example	Changing various settings of the cell phone
Initial Setting	1234

EZ Password

Usage Example	Subscribing or canceling subscriptions to EZweb fee-based contents
Initial Setting	The four-digit number you wrote on your subscription form

Premium EZ Password

Usage Example	①Subscribing or canceling subscriptions to EZweb fee-based contents paid by まとめてau 支払い (au Collective Payment Service) ②Purchasing products from EZweb sites using まとめてau 支払い (au Collective Payment Service)
Initial Setting	The four-digit number you wrote on your subscription form

Using CA001 in Viewfinder Position

When the cell phone is in Viewfinder position, you can operate CA001 by tapping the screen or by using the side keys.

- See page 8 for how to set CA001 to Viewfinder position.

Operating CA001 by Tapping the Screen

The screen of CA001 is a Touch panel. When the cell phone is in Viewfinder position, you can operate it by tapping the screen with your finger. You can operate by displaying and tapping the Touch buttons, or by sliding your fingers on the screen.

- Use one finger to tap the Touch panel. You cannot operate the cell phone by:
 - Tapping the screen with a finger with a glove on it,
 - Tapping the screen with two or more fingers,
 - Tapping the screen with a fingertip,
 - Tapping the screen with a ball-point pen, a pencil, or another sharp object, or
 - Tapping the screen with an object on it.
- The following may cause a malfunction.
 - Tapping the screen with a wet finger,
 - Tapping the screen with your hand on it,
 - Tapping the screen extremely hard, or
 - Putting a seal on the display.
- The Touch panel may not react:
 - Immediately after you wipe the display, or
 - Tapping the screen with a protective sheet or peep-prevention sheet on it.



- By default, the cell phone vibrates when you tap the Touch panel.
- After the Touch panel turns on, it takes some time before it becomes operatable. If it does not become operatable yet, wait a moment.
- The sensor of the Touch panel turns off about five seconds after the screen is off. Tapping the Touch panel does not turn it on. Press any of the side keys to turn the Touch panel on, and then the Touch panel becomes operatable.
- The Touch panel is not operatable while making or receiving a call, or during a call.


The Touch buttons appear when you tap the screen with CA001 in Viewfinder position.

 







 

You can select an item or perform an operation by tapping the Touch buttons.

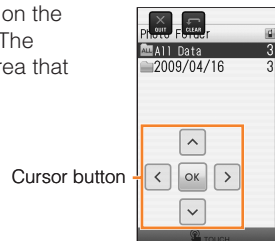


The Touch buttons on the screen will be hidden if you do not tap any of the Touch buttons or you do not perform any operation on the Touch panel for about ten seconds.

You can use the Touch buttons on the screen instead of  and . The Cursor buttons appear in the area that you tap on the screen.



Touch Button		Function
Cursor Button		Tap this button instead of  to select an item, perform an operation.
	   	Tap these buttons instead of  to move the cursor on the screen.
		Tap this button instead of  to return to the previous screen.
		The current function exits.



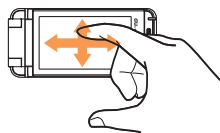

 
When the Touch buttons are not displayed on the screen, you can operate the CA001 by sliding a finger on the screen upward, downward, leftward and rightward.

 
 








Operation	Function
Sliding a finger on the screen upward, downward, leftward and rightward	You can move the cursor on the screen, adjust the volume or display the image ahead or behind.
Touching and holding the display after sliding a finger on the screen upward, downward, leftward and rightward	You can continuously move the cursor on the screen or adjust the volume.

- If you do not slide a finger on the screen long enough, the Cursor buttons may appear. In that case, slide a finger longer.
- In the camera function, you cannot operate the cell phone by sliding a finger on the screen.
- Some EZapps do not react even if you slide a finger on the screen.

Operating CA001 with Side Keys

You can operate CA001 by side keys when CA001 is in Viewfinder position. Press   instead of pressing . Press  instead of pressing . Using side keys, you can use following functions.


Side Key	Main Functions
	Display multi play window.
	<ul style="list-style-type: none"> • When the standby screen is displayed, press this key to display manner menu. • When the standby screen is displayed, hold down this key for at least one second to turn on/off manner mode. • Take an incoming call by Answer memo. • Hold down this key for at least one second during a call, to end the call. • Use this key instead of  to return to the previous screen.

 	<ul style="list-style-type: none"> • When the standby screen is displayed, press these keys to select EZ News Flash ticker/window, au one Gadget or search window. • When the standby screen is displayed, press these keys to display Shortcut menu. • Use these keys instead of  to move the cursor on the screen. • When the standby screen is displayed, hold down this key for at least one second to activate au Media Tuner.
	<ul style="list-style-type: none"> • When the standby screen is displayed, hold down this key for at least one second to activate pocket light. • Hold down this key for at least one second during a call, to switch ON/OFF the microphone. • Operate the function which is displayed below center of the screen.
	<ul style="list-style-type: none"> • Hold down this key for at least one second during a call, to activate photo shooting. • Use this key as a shutter/recording start key when shooting photos/movies. • Save photos/movies.

Switching Direction of the Display by Changing Orientation of CA001

When CA001 is set to Viewfinder position, vertical/horizontal direction of the display will change according to the orientation of the cell phones as described in the illustration.

- While displaying the Touch menu
- While playing a video clip/movie by LISMO Player
- While watching TV (1Seg)/recorded TV program by au Media Tuner
- While displaying a photo (image) which is saved to the Data Folder

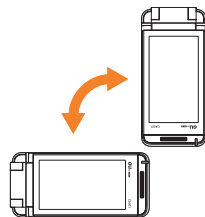


Using the Touch Menu


 
By default, the Touch menu is displayed by setting CA001 to Viewfinder position when the standby screen is displayed. From the Touch menu, you can activate functions suitable for use in Viewfinder position.

When the standby screen is displayed, set CA001 to Viewfinder position.

Touch menu is displayed.


➡ Tap the Touch button.

	Touch Session
	Mobile Dictionary
	Data Folder
	microSD
	TV
	LISMO Player
	Photo
	Movie
	PC Site Viewer

- Tap  or press  to return to the standby screen.
- When the standby screen is displayed and the cell phone is in Viewfinder position, the Touch menu is displayed by tapping the screen.

Making and Answering Calls





 
Making a Call

When the standby screen is displayed, use  to  to enter a phone number.

- When calling to a fixed-line phone, you also need to enter the area code.

➔ Press .

- To end the call, press .

- After you enter a phone number, you can add 184 or 186 to the phone number as follows:
 - ➔ Press  (Call).
 - ➔ Use  to select *Add Special No.* and then press  (OK).
 - ➔ Use  to select *184* or *186* and then press  (Add).
- 184:** When you do not want to inform the other party of your phone number.
- 186:** When you want to inform the other party of your phone number.
- During a call in Viewfinder position, check the earpiece position to hear the caller's voice properly.
- During a call, it is recommended to use your cell phone opened.

Making an International Call

au International Call Service

Available without any additional application




Example: To call 212-123-△△△△ in the USA

Press      .

 
 

↑
International access code

➔ Press .

↑
Country code (USA)

➔ Press   .

↑
Area code

➔ Press    △△△△.

↑
Phone number


➔ Press .

- Calling charges for this service are added to monthly cell phone calling charges and billed together.
- Check the country code at the au Customer Service Center.
- For charges, refer to au MOBILE PHONE SERVICE GUIDE or au Customer Service Center.

001 KOKUSAI MOBILE TALK

Application required.

For inquiries, contact the KDDI Customer Service Center.

 0077-7160

(toll-free; open 9:00 to 20:00 everyday including weekends and national holidays)



- Charges for 001 KOKUSAI MOBILE TALK are charged separately from monthly au telephone charges.
- Check the country code at the au Customer Service Center.
- For charges, refer to au MOBILE PHONE SERVICE GUIDE or au Customer Service Center.

Answering a Call

To answer a call, press .

- To end the call, press .

- During a call in Viewfinder position, check the earpiece position to hear the caller's voice properly.
- During a call, it is recommended to use your cell phone opened.

Display When a Call is Received


The phone number of the caller appears.



If the caller's phone number and name are in the phone book, the name is also displayed.

When the phone number of the caller is not displayed, one of the following indicators may appear.

Indicator	Meaning
ID Unsent	The caller did not send a Caller ID.
Payphone	The call is from a pay phone.
Not Support	The call is from a phone that does not support Caller ID.

Missed Call Notification


If you did not answer a call,  and *Missed Call* are displayed to let you know that you missed a call.

To check the caller's phone number, use  to select *Missed Call* and then press  (Select). You can then return the call (see page 23).

Returning a Call (Outgoing History/Incoming History)

Example: Returning a call to a phone number in the incoming history

When the standby screen is displayed, press .

- Press  while the standby screen is displayed to display the Outgoing History screen.

➔ Use  to select the phone number you want to call and then press  (Detail).

- Press  to display the Outgoing History screen.

➔ Press .


- The cell phone can store up to 50 phone numbers in each of the incoming and outgoing history.

One-ring Calls

What is a One-ring Call?



A one-ring call is a call from an unknown caller that only rings once, causing it to be stored in the incoming history. One-ring calls are often used to get you to return the call, which will connect you to a dating service or some other service that charges you at high rates.

One-ring Indicator

 indicator on the Incoming History screen indicates you have received a one-ring call (a call rang for three seconds or shorter). Be careful when you return a call to an unknown caller.

Adjusting the Earpiece Volume during a Call






During a call, use .

- : Increases the volume.
- : Decreases the volume.


➔ Press .






Turning On Manner Mode

When the standby screen is displayed, hold down  for at least one second.

This turns on manner mode, and displays , , , and  on the standby screen. This also turns on Answer memo, which is indicated by  on the standby screen.

Turning Off Manner Mode


















When the standby screen is displayed, hold down  for at least one second.

Turning off manner mode causes , , , and  to disappear from the standby screen. Answer memo is also turned off, which is indicated by  disappearing from the standby screen.

- Even in manner mode, the cell phone still emits a sound when autofocusing, a shutter sound when you take a photo.















Changing the Incoming Ring Tone

When the standby screen is displayed, press .

- ➔ Use  to select *Function* and then press  (Select).
- ➔ Use  to select *Sound/Vib/LED* and then press  (Select).
- ➔ Use  to select *Incoming Setup* and then press  (Select).
- ➔ Use  to select *Incoming Call* and then press  (Select).
- ➔ Use  to select  (Ringtone) and then press  (Select).
- ➔ Use  to select *Original* and then press  (Select).
- ➔ Use  to select a ring tone and then press  (Set).
The incoming ring tone is set.
 - If you press  (Play), the tone plays.
- ➔ Press  (OK).

Adjusting the Incoming Ring Tone Volume

When the standby screen is displayed, press .

- ➔ Use  to select *Function* and then press  (Select).
- ➔ Use  to select *Sound/Vib/LED* and then press  (Select).
- ➔ Use  to select *Incoming Setup* and then press  (Select).
- ➔ Use  to select *Incoming Call* and then press  (Select).
- ➔ Use  to select  (Ringtone Volume) and then press  (Select).
- ➔ Use  to adjust the volume and then press  (Set).
 - Each press of  changes the volume one step.

<i>STEP</i> ↑	The ring tone volume gradually increases.
<i>STEP</i> ↓	The ring tone volume gradually decreases.
Level5 ↑ Level1	The ring tone sounds at the set volume.
<i>OFF</i>	The ring tone does not sound.



- ➔ Press  (OK).

Turning On the Answer Memo

When the standby screen is displayed, hold down  for at least one second.

 is displayed on the standby screen.






Turning Off the Answer Memo

When the standby screen is displayed, hold down  for at least one second. The answer memo is turned off and  disappears from the standby screen.

- The cell phone can record a maximum of ten messages, each up to 60 seconds long.
- Answer memo is a function that automatically answers calls and allows callers to record messages. Use the Answering Service (Voice Mail) when your phone is turned off or when you are in a location where a signal cannot be received.













Playing a Message

If a message is recorded, *Answer Memo* appears on the standby screen.

- ➔ Use  to select *Answer Memo* and then press  (Select).
- ➔ Use  to select the message you want to play and then press  (Play).
 - To stop playing the message, press  (Stop).

Deleting a Message

When the standby screen is displayed, press .

- ➔ Use  to select *Answer Memo* and then press  (Select).
- ➔ Use  to select *Answer Memo List* and then press  (Select).
- ➔ Use  to select the message you want to delete and then press  (SubMenu).
- ➔ Use  to select *Delete* and then press  (OK).
- ➔ Use  to select *Delete One* and then press  (OK).
- ➔ Use  to select *YES* and then press  (OK).

Global Functions

You can use CA001 overseas in the area supporting Global Passport CDMA without any special applications.

Setting Area

When the standby screen is displayed, press .

➔ Use  to select *Accessories* and then press  (Select).


➔ Use  to select *GLOBAL Function*, press  (Select) and then press  (OK).

➔ Use  to select *Area Setting* and then press  (Select).

➔ Use  to select *Overseas* and then press  (Select).

- Confirmation screen is displayed. Use  to select *YES* and then press  (OK).

Calling to Japan from Overseas

When the standby screen is displayed, enter a phone number and then press  (SubMenu).


➔ Use  to select *Intl Call:Japan* and then press  (OK).

➔ Press .

- At the time of purchase, the service area information (PRL: Roaming area information) is set. However, this information may be updated several times a year. Update to the latest data before departure.
- When making a call from Japan to a cell phone overseas supporting Global Passport CDMA, make a call in the normal operation.
- Subscribe and make initial settings for EZweb in Japan.

Character Input

Character Entry Modes

When a character entry screen is displayed, you can select a character entry mode if you press  (Char.Type).

Menu Items

 : Kanji conversion mode

 : Double-byte katakana mode



 : Single-byte katakana mode

 : Double-byte alphanumeric mode

 : Single-byte alphanumeric mode

 : Double-byte number mode

 : Single-byte number mode

 

 


 

 

 


Use  to select a character entry mode and then press  (OK).


Entering Alphanumeric Characters

You can use the keys  to  to enter characters.


More than one character is assigned to each key.

The following table shows the key assignment for entering characters.




	Number of Times to Press the Key											
Key	1	2	3	4	5	6	7	8	9	10	11	12
	.	@	—	_	/	:	~	1				
	a	b	c	A	B	C	2					
	d	e	f	D	E	F	3					
	g	h	i	G	H	I	4					
	j	k	l	J	K	L	5					
	m	n	o	M	N	O	6					
	p	q	r	s	P	Q	R	S	7			
	t	u	v	T	U	V	8					
	w	x	y	z	W	X	Y	Z	9			
	0	Inputs symbols										
	Inputs symbols (switches an unconfirmed character between uppercase and lowercase).											
	Adds a line break and displays characters in the opposite order.											

When you change your e-mail address, you cannot use the characters in  for the account name (part of the address to the left of @).

■ Entering Two or More Characters Assigned to the Same Key

After you enter the first character, press  and then enter the next character.

■ Deleting Characters

To delete one character at a time, move the cursor to the character you want to delete and then press . To delete all characters to the right of the cursor, hold down  for at least one second. If there are no characters to the right of the cursor, holding down  will delete all the characters.

■ Starting a New Line

Press .

- Certain functions such as c-mail do not support entering new lines.

■ Entering E-mail Addresses

 
 
 
 
 
 



■ E-mail Address Compatible Characters

- Before you enter an e-mail address, switch to the lowercase alphanumeric (single-byte) mode.
- When changing your e-mail address, you can enter up to 30 single-byte alphanumeric and symbol characters for the account name (part to the left of @). Note the following:
 - Uppercase characters cannot be used.
 - Period (.) or zero (0) cannot be used as the first character.

■ How to Enter E-mail Addresses

Example: Entering "taro.23@kddi.co.jp"

 
 

 

Enter "taro.23".







- t : Press  once.
 a : Press  once.
 r : Press  three times.
 o : Press  three times.
 . : Press  once.
 2: Press  once and then .
 3: Press  once and then .

➔ Enter "@".


- @: Press  twice.





➔ Enter "kddi" and then press (OK).

- k: Press  twice.
 d: Press  once and then .
 d: Press  once.
 i : Press  three times.

- ➔ Press  (SubMenu).
 - ➔ Use  to select *Phrase* and then press  (OK).
 - ➔ Use  (Category) to select *Internet*.
 - ➔ Use  to select *.co.jp* and then press  (Select).
- "*.co.jp*" is entered.

Entering Pictograms












 






 
When a character entry screen is displayed, press .

- ➔ Use  to select the pictogram you want to enter and then press  (Select).
- You can enter pictograms consecutively if you press  (Repeat) instead of  (Select).

Phone Book

Saving a Phone Book Entry







When the standby screen is displayed, hold down  for at least one second.

- ➔ Use  to select  [Name] and then press  (Select).
- ➔ Enter a name and then press  (OK).
The  [Reading] for the name is entered automatically.
- ➔ Use  to select  [Phone No.1] and then press  (Select).
- ➔ Enter a phone number and then press  (OK).
 - If the phone number is for a fixed-line phone, enter the phone number starting with the area code.
- ➔ Use  to select a phone number type and then press  (Select).
 - Follow the next step to enter an e-mail address. If you do not want to enter an e-mail address, press  (Reg).
- ➔ Use  to select  [E-mail Address1] and then press  (Select).
- ➔ Enter an e-mail address and then press  (OK).
- ➔ Use  to select an e-mail address type and then press  (Select).
- ➔ Press  (Reg).

- The phone book can store up to 1,000 entries.
- The cell phone automatically saves an entry to the lowest available memory number from 000 to 999.
- You can save three phone numbers and three e-mail addresses for each phone book entry.
- You can also assign a group No., and enter birthday, address, and other information.



 


Dialing from the Phone Book

When the standby screen is displayed, press .

- ➔ Use  to select the entry containing the phone number you want to dial and then press  (Detail).
- ➔ Use  to select the phone number and then press  (Select).
- ➔ Use  to select *Voice Call* and then press  (OK).



Editing Phone Book Entries

When the standby screen is displayed, press .

- ➔ Select an entry and press  (Detail).
- ➔ Press  (Edit).
- ➔ Edit the contents and then press  (Reg).
- ➔ Use  to select *Overwrite* and then press  (OK).

Saving a Phone Number from the Incoming or Outgoing History

Example: Saving a phone number from the incoming history to the phone book

When the standby screen is displayed, press  and use  to select the phone number you want to save.

➔ Press  (SubMenu).

➔ Use  to select *Reg to Adrs Book* and then press  (OK).

➔ Use  to select *Register New* and then press  (Select).

➔ Use  to select a phone number type and then press  (Select).








- For details on saving a phone book entry, see page 30.

Pair Function

You can register a maximum of five pair partners you contact often to easily call or send mail.




Registering a Pair Partner

When the standby screen is displayed, press .

- ➔ Use  to select a blank screen and then press  (Select).
- ➔ Use  to select *YES* and then press  (OK).
- ➔ Use  to select a pair partner, press  (Detail) and then  (Select).
 - When registering a phone book entry with multiple phone numbers and e-mail addresses as pair partner, select the phone number and e-mail address to use with the Pair function.
 - When you delete a phone book entry registered in the pair partner, the phone book entry is also deleted from the Pair function.




Making a Call to a Pair Partner

When the standby screen is displayed, press .

- ➔ Use  to select the person you want to call.
- ➔ Use  to select *Call* and then press  (Select).

Sending Mail to a Pair Partner

When the standby screen is displayed, press .

- ➔ Use  to select the person you want to send mail.
- ➔ Use  to select *E-mail* or *C-mail* and then press  (Select).
 - To create an e-mail message, see "Creating and Sending E-mail Messages" on page 33. To create a c-mail message, see "Creating and Sending C-mail Messages" on page 36.

Using E-mail




















To use e-mail, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, you need to configure initial settings.

You can send and receive e-mail with other cell phones that support e-mail, and with PCs. In addition to text messages of up to 5,000 double-byte (or 10,000 single-byte) characters, you can also send photos and movies by e-mail.

- The packet communication charge for sending and receiving e-mail applies to the amount of data sent and received.
- You can send an e-mail message to up to 30 different addresses at one time.
- You can send up to 1,000 e-mail messages per day (a message with multiple recipients is counted as more than one message).
- Sending and receiving e-mail messages that include attachment data may take a while.








Creating and Sending E-mail Messages

When the standby screen is displayed, press .




- ➔ Use  to select *Create New* and then press  (Select).
- ➔ Use  to select *Address* and then press  (Select) twice.
- ➔ Use  to select *Address Book* and then press  (Select).
- ➔ Use  to select a phone book entry and then press  (Detail).
- ➔ Use  to select an address and then press  (Select).
- ➔ Press  (OK).
- ➔ Use  to select *Subject* and then press  (Select).
- ➔ Enter a subject and then press  (OK).
 - You cannot enter single-byte katakana characters or a new line in a subject.
- ➔ Use  to select *Text* and then press  (Select).
- ➔ Enter text and then press  (OK).
 - You cannot enter single-byte katakana characters.
- ➔ Press  ( Send).

Reading Received E-mail Messages

When you receive an e-mail message, *E-mail* appears on the standby screen.

- ➔ Use  to select *E-mail* and then press  (Select).
- ➔ Press  (Select).
 - : Indicates a read message.
 - : Indicates an unread message.
- ➔ Use  to select the new message and then press  (Select).

Reading an E-mail Message from the E-mail Menu



When the standby screen is displayed, press  to display the E-mail menu, use  to select *Inbox* and then press  (Select).



For subsequent operations, see "Reading Received E-mail Messages" above.

Reading an E-mail Message with an Attached Photo or Movie

 
Example: Viewing an attached photo

Display the e-mail message that has an attached photo (above).

- ➔ Use  to select the file name and then press  (Select).







- ➔ Use  to select the file name and then press  (Receive).

- ➔ Press  (Play).

- Selecting the file name or pressing  (Receive) may be unnecessary for some files to be displayed, depending on the file size.

Replying to Received E-mail Messages

When the standby screen is displayed, press .

- ➔ Use  to select *Inbox* and then press  (Select).
- ➔ Press  (Select).
- ➔ Use  to select the message you want to reply to and then press  (Select).
- ➔ Press  (Reply).

"Re:" is prefixed to the subject, and the text of the message is quoted.
- ➔ Refer to "Creating and Sending E-mail Messages" (page 33) for subsequent operations.














Rejecting Spam

Setting mail filters to reject spam is recommended.
The サポート設定 (Supportive Settings) helps you to set mail filters easily by answering questions that appear on the screen.

Setting Mail Filters

Example: Connecting to サポート設定 (Supportive Settings)

When the standby screen is displayed, press .

- ➔ Use  to select *E-mail Setup* and then press  (Select).
- ➔ Use  to select *Mail Filter* and then press  (Select).
- ➔ Use  to select *次へ (Next)* and then press  (Select).
- ➔ Use  to select the input box and then press  (Input).
- ➔ Enter your security code and then press  (OK).
- ➔ Use  to select *送信 (Send)* and then press  (Select).
- ➔ Use  to select an item and then press  (Select).

カンタン設定 (Simple Settings)

サポート設定 (Supportive Settings)	Set the filter by answering questions This is recommended for users who want to configure settings while confirming conditions.
フィルターレベル (高) Filter Level (High)	Shut out all mail from PCs This is recommended for users who only want to send mail to and receive mail from cell phones.
フィルターレベル (中) Filter Level (Medium)	Block unsolicited advertisement, spoof e-mail and mail from specific addresses This is recommended for users bothered by certain senders or spam mail.
フィルターレベル (低) Filter Level (Low)	Block unsolicited advertisement and spoof e-mail This is the minimum level recommended for all users.

- You can also prevent spam by changing your e-mail address. For details on changing your e-mail address, see page 15.

Using C-mail

C-mail is a service that uses phone numbers as addresses to exchange messages between au cell phones that support c-mail. A c-mail message can contain up to 50 double-byte (or 100 single-byte) characters.

- The c-mail send charge applies when sending c-mail.









C-mail Safety Block






C-mail safety block is a function that allows you to reject c-mails that include URLs (http://△△△, https://△△△) or phone numbers in the c-mail message text.

C-mail safety block is valid by default. Cancel the setting if you want to receive c-mails that include URLs and phone numbers in the message text.

Creating and Sending C-mail Messages








When the standby screen is displayed, hold down  for at least one second.

- ➔ Use  to select *Create New* and then press  (Select).
- ➔ Enter text and then press  (OK).
- ➔ Use  to select  [Address] and then press  (Edit).
- ➔ Use  to select *Quote Adrs Book* and then press  (OK).


 

- ➔ Use  to select a phone book entry and then press  (Detail).
- ➔ Use  to select a phone number and then press  (Select).
- ➔ Press  (Send).

Reading Received C-mail Messages

When you receive a c-mail message, *C-mail* appears on the standby screen.

- ➔ Use  to select *C-mail* and then press  (Select).
- ➔ Press  (Select).
 - : Indicates a read message.
 - : Indicates an unread message.
- ➔ Use  to select the new message and then press  (View).

Reading a C-mail Message from the C-mail Menu

When the standby screen is displayed, hold down  for at least one second to display the C-mail menu, use  to select *Inbox* and then press  (Select).

For subsequent operations, see "Reading Received C-mail Messages" above.


Camera

Your cell phone has a CMOS camera with 5.00 million effective pixels for shooting photos and movies. You can use the self-timer and autofocus. Shot images can be used for the standby screen, and attached to e-mail messages.


Photo Taking Tips

When taking photos, frame the subject within the display and hold the cell phone steady with both hands to avoid shaking.

Regular Open Position

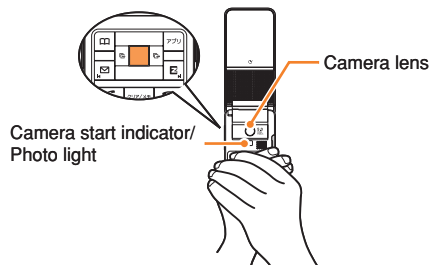

Viewfinder Position

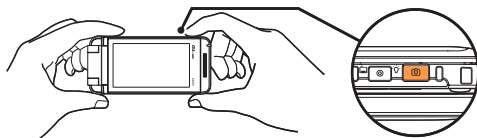

About Photo Modes

The following modes are available for taking photos. W.paper (Wide) is set for W.paper mode and 5M is set for DSC mode at the time of purchase.

Mode	Photo Size	Storage Location
W.paper Mode	W.paper (Normal)	The <i>Photo Folder</i> in the Data Folder of the cell phone
	W.paper (Wide)	
DSC Mode	0.3M	The <i>DSC Folder</i> in the Data Folder of a microSD memory card*
	1M	
	2M	
	3M	
	4M (Wide)	
	5M	

* When a microSD memory card (commercially available) is not inserted, the files are saved to the Data Folder of the cell phone.

- Take care not to cover the lens and optical sensor with a strap or finger.

Taking a Photo



When the standby screen is displayed, hold down  **for at least one second.**

The monitor screen appears.

➔ Press  **(Shoot).**

 
The preview screen is displayed.

Using to Take a Photo

Point the AF frame at the subject, press  halfway to focus, and then press  fully to release the shutter.

Saving a Photo

Press  (Save) on the preview screen.

- If you do not want to save the photo, press  in the preview screen.


Taking a Photo in Viewfinder Position

When the standby screen is displayed, hold down  for at least one second.

The monitor screen appears.

➔ Set CA001 to Viewfinder position.

See page 8 on how to set CA001 to Viewfinder position. The Touch buttons are displayed on the monitor screen.

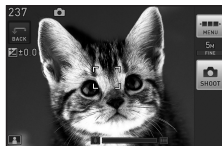


➔ Tap

The preview screen is displayed.



Saving a Photo

Tap  on the preview screen.



- If you do not want to save the photo, tap  on the preview screen.
- When you take a photo with CA001 in Viewfinder position, top of the shot image will be top of the saved image.

Viewing Photos

When the standby screen is displayed, press .

➔ Use  to select *Data Folder* and then press  (Select).

➔ Use  to select *Photo Folder* and then press  (Select).

➔ Use  to select a folder and then press  (Select).

➔ Use  to select the photo you want to view and then press  (Select).

EZweb is an information service that allows you to enjoy browsing the Internet on your cell phone. You can also download Chaku-Uta-Full®, Chaku-Uta®, news, and other contents from web pages.

To use EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, you need to configure initial settings.

- The packet communication charge for EZweb connection applies to the amount of data sent and received, not to the length of time connected.
- In addition to communication charges, some sites charge for providing information.

Accessing Sites

■ Viewing the au one Top



You can access EZweb from the au one Top. A variety of useful and fun sites are available on EZweb. When the standby screen is displayed, press **[E]**, use **[↑]** to select *au one Top* and then press **[●]** (Select).


 


キーワード検索機能 (Search by Keyword) Provides a search function for searching for information by keyword.
カテゴリ(メニューリスト) (Category (Menu List)) Provides a list of various content provider sites.
トップニュース (Top News) Provides automatic updates of the latest news.
最新オススメ情報 (Latest News) Introduces up-to-date information concerning entertainment, daily life, etc.
天気・乗換・占い・テレビ・銀行 (Weather, Transportation, Horoscope, TV & Bank) Provides direct access to these au one services.
買う (Shopping & Auctions) Provides a list of shopping and auction sites available from your cell phone.
知る (Tips & Tools) Provides information on sports and stock prices, as well as useful tools such as maps and dictionaries.
楽しむ (Hobbies & Culture) Provides the latest information, such as games, music, books, hobbies and entertainment.
暮らす (Lifestyle) Provides travel, restaurant and other lifestyle-oriented information.








集まる (Community) Provides interesting and useful information that you can use for SNS or blogs.
メール (Mail) Provides an extra e-mail address that can be used on your PC.
マイページ (My Page) Provides useful information and tools tailored to your cell phone usage and a large data storage area.
au style Introduces information and sites that au recommends.
とくする情報 (Valuable Information) Presents gifts and push information to the EZweb subscriber for free.
auお客さまサポート (au Customer Support) Provides information about charges, various applications, au online manual and notices from au.
auワンちゃんの部屋 (au Doggy's Room) Introduces au Doggy.
カンタンアクセス・オープンサイト (Simple Access & Open Site) Provides easy access and introduces open sites.
災害用伝言板 (Disaster Message Board) Register and confirm safety information in time of disaster.
ENGLISH Introduces English sites.

Basic Operations

 
Use  to select the site you want to access and then press  (OK).



Press  or  to return to the previous screen. Hold down either key for at least one second to return to the au one Top.

The following describes the basic operations that are available while accessing sites.

Key Operation	Description
	Exits EZweb.
	Moves the cursor up and down. When there is data available above or below the current screen, scrolls up and down the screen one line at a time.
	When there is data available above or below the current screen, scrolls the screen page by page.  : Scrolls one page up.  : Scrolls one page down.
 , 	Returns to the previous screen.

Bookmarking Frequently Accessed Pages

When the page you want to bookmark is displayed, press  (BrowserMenu).

➔ Use  to select *New bookmark* and then press  (OK).

- Some pages cannot be bookmarked.

➔ Press  (Reg).



The displayed page is bookmarked, and its title and URL are added to the Bookmark.

- The Bookmark can contain up to 100 titles and URLs.

Viewing Bookmarked Pages









When the standby screen is displayed, press  and then use  to select *EZweb*.

➔ Use  to select *Bookmark(s)* and then press  (Select).

➔ Use  to select the bookmark for the page you want to view and then press  (Connect).
The cell phone connects to the site.






 
Checking Charges


When the standby screen is displayed, press .

- ➔ Use  to select *Function* and then press  (Select).
- ➔ Use  to select *Time/Toll/Sub* and then press  (Select).
- ➔ Use  to select *Inquire Toll* and then press  (Select).
- ➔ Use  to select *YES* and then press  (OK).
 - Select the item you want to check and then follow the on-screen instructions.

Downloading Chaku-Uta-Full®/Chaku-Uta®

When the standby screen is displayed, press  and then use  to select *EZweb*.

- ➔ Use  to select *au one Top* and then press  (Select).
- ➔ Use  to select *カテゴリ (メニューリスト)* (Category (Menu List)) and then press  (OK).
- ➔ Use  to select *着うた (Chaku-Uta®) or 着うたフル・ビデオクリップ (Chaku-Uta-Full®・Video Clip)* and then press  (Select).

- ➔ Use  to select the site you want to access and then press  (Select).

The download instructions appear.

- Fee-based information sites require entry of EZ password or Premium EZ password. Follow the on-screen instructions to enter either password. See page 16 for details.

- ➔ Follow the on-screen instructions.

Download is completed.

- Downloaded data is saved automatically to the Data Folder.

- ➔ Press  (Play).

The downloaded Chaku-Uta-Full® or Chaku-Uta® plays.

- This procedure is only an example for the purpose of explanation and may differ from actual procedures. Follow the instructions on the site from which you want to download the data.


EZ News Flash/au one Gadget

EZweb Subscription Required

Use the EZ News Flash/au one Gadget to display flash news, or activate the set gadget on the standby screen. You can check the news details and other information by selecting the ticker field.

You can use the EZ News Flash and au one Gadget by making a few simple settings following the EZweb initial setup.

Basic Operations

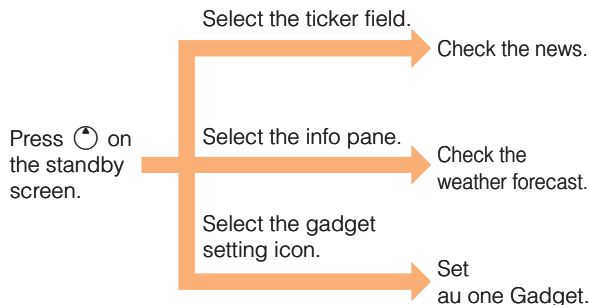

- The EZ News Flash information is automatically received at no charge. Note, however, that packet communication charges may be incurred for manual updates and connecting to EZweb sites. In this case, a confirmation screen for network connection is displayed.

- Packet communication charges are incurred for using au one Gadget applications that require network connection for information updates.
- The EZ News Flash information is updated at regular time intervals. (info icon) appears while receiving information.

Setting EZ News Flash

The EZ News Flash is available free of charge. You have only to make a few simple settings. After following the procedure in “Initial Setup of E-mail and EZweb” on page 11, configure EZ News Flash settings. If you did not configure the EZ News Flash settings at the time of the initial setup, follow the steps below.

When the standby screen is displayed, select the ticker field and then press (OK).

➔ Follow the on-screen instructions.

The setup procedure is completed.

- When the standby screen returns, a message asking you to wait for a while until the next update takes place appears in the ticker field.

■ Canceling EZ News Flash

When the standby screen is displayed, select the ticker field and then press ● (News).

➡ Press  (メニュー[Menu]), use  to select サービス設定解除 (Service Cancellation) and then press ● (選択[Select]).

➡ Follow the on-screen instructions.

■ Changing the Reception Settings for EZ News Flash Information

You can change the ring tone, vibrator and LED settings under M216 *NewsFlash Receive* for reception of EZ News Flash information.

If you do not want the ring tone to sound when receiving EZ News Flash information, set the volume to *OFF*.

- You can configure the au one Gadget settings from the gadget setting icon on the standby screen.

Using GPS (Global Positioning System), EZ Navi provides useful positional information services.

When the standby screen is displayed, press  and then use  to select the EZnavi.

- The packet communication charges for using EZ Navi services apply to the amount of data sent and received. Some services may require a separate information fee.
- Before using EZ Navi, you must configure initial settings of EZweb (page 11).

Passenger Seat Navi for People in the Passenger Seat to Check the Route

Passenger Seat Navi guides the passengers to the destination with the best route using voice and map.

Drivers are not allowed to use Passenger Seat Navi.

Security Navi to Check Where Your Kids Are

The Security Navi application is made up of the following three functions:

いつでも位置確認 (Auto Position Search [monthly charge]),
エリア通知 (Area Message [no monthly charge]),
位置確認メール (Position Search Mail [no monthly charge])

Using these functions, you can check the position of an au cell phone that supports Security Navi; and automatically send a mail notification to the specified au cell phones when you enter (or are in) or leave (or are no longer in) the set area within a predetermined period of time.

EZ Navi Walk for When You Go Out

フルモード (Full mode)



Function	Explanation
トータルナビ／地図 (Total Navigation/Map)	Navigate optimum route from various transportation means such as train/aircraft/bus/taxi. See current position and map of wherever you like.
乗換／時刻表 (Connection/Timetable)	Search for train connections, timetables and railway information.
お店／施設／イベント (Shop/Facility/Event)	Search for shops, facilities and event information.
ドライブ／渋滞情報 (Road/Traffic Information)	See road and traffic information nationwide in real time.
オススメ便利メニュー (Useful Menu)	Provides PC cooperative service and functions enabling you to enjoy EZ Navi Walk more.
設定／会員登録／インフォ (Setting/ Membership Registration/Information)	Configure settings/membership registration/campaign information.

シンプルモード (Simple mode)



Function	Explanation
ナビをする (Navigation)	Navigate optimum route from various transportation means such as train/aircraft/bus/taxi.
現在地の地図 (Map of Your Current Location)	See map around of your current location.
乗換案内 (Connection Information)	Confirm train connections from the departure to the arrival station.
渋滞／交通情報 (Traffic/Transit Information)	See road and traffic information nationwide in real time.
会員登録・インフォ (Membership Registration/Information)	Configure settings/membership registration/campaign information.
フルモードとは (About Full Mode)	Introduces functions available in Full mode.

3D Navi

Shows a 3D view at guidance points and around the destination area.

Evacuate Navi to Guide You Home or to Nearby Evacuation Areas during Disasters

Nearby public evacuation areas or the direction to your home can be determined using the map data pre-installed on the CA001 (避難所マップ[Evacuate Area Map]).

Other useful contents can be downloaded from the 災害時ナビ(Evacuate Navi) section of the EZweb site, including 帰宅支援マップ(Route Home Map) which can guide you between two locations you specify, for example, from your office to home.

- Some contents require a monthly charge.
- Use the information on the screen as a reference and always follow the instructions of police, fire and other municipal authorities.
- When using Evacuate Navi, checking your current position may take more time than usual depending on the status of the GPS satellites.


TV (1Seg)

EZweb Subscription Required

"1Seg", a mobile terrestrial digital television service in Japan, is available on the CA001.

Using the TV Antenna

When watching TV (1Seg), fully extend the TV antenna to ensure good reception.

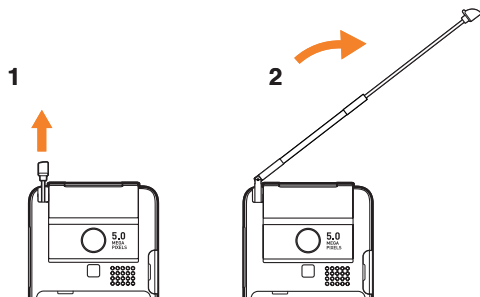

- Before using TV, you must configure initial settings of EZweb (page 11).
- If you are watching TV indoors, you may be able to improve the reception by moving closer to a window.

- The continuous viewing times of TV (1Seg) are as follows. The figures vary according to the usage of data broadcasts.

Continuous viewing time	Using earphones	DBEX ON: Approx. 2 hrs 50 min. DBEX OFF: Approx. 2 hrs 50 min.
	Using the speaker	DBEX ON: Approx. 2 hrs 50 min. DBEX OFF: Approx. 2 hrs 50 min.

- For information about the "1Seg" service, refer to the following homepage.

The Association for Promotion of Digital Broadcasting

From a PC	http://www.dpa.or.jp/
From a cell phone	http://www.dpa.or.jp/1seg/k/

Initial Setup of au Media Tuner

To watch TV (1Seg) using the au Media Tuner, you need to configure initial settings.



When the standby screen is displayed, hold down  for at least one second.

Disclaimer notes are displayed.

➡ Use  to check the disclaimer notes, use  to select **OK**, and then press  (**選択 [Select]**).

The initial setting screen for using the au Media Tuner is displayed.

- Follow the on-screen instructions to configure each setting. Then, the screen for setting TV (1Seg) channels appears.

➡ Use  to select **オート設定 (放送波) (Auto (Broadcasting wave))** and then press  (**選択 [Select]**).


Automatic channel scanning begins. When receivable channels are found, the channel setup is completed.

- Select **マニュアル設定 (Manual)** to set the channel manually.


Watching TV (1Seg)


When the standby screen is displayed, hold down  for at least one second.

■ To Change Channels

Use /  to change channels.


You can select TV (1Seg) and EZ Channel-Plus/EZ Channel programs.

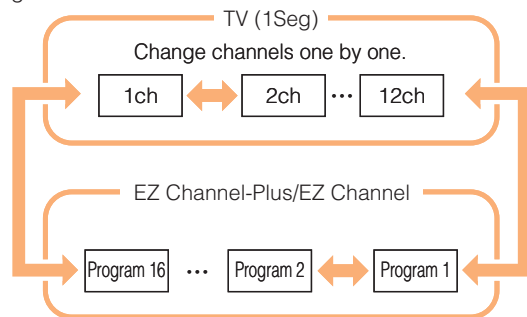


- Before using this feature, you must configure au Media Tuner initial settings (see the procedure on the left).
- Channels cannot be changed with  when the data operation screen is displayed.

Basic Operations

Launch TV (1Seg) to start receiving data broadcasts.

The data operation screen appears when a data broadcast is received. Press  (Vol/Ch) on the data operation screen to switch to the TV operation screen.

On the TV operation screen, pressing  switches the display.

Data operation screen




 (Vol/Ch)


TV operation screen



 (戻る[Return])

- On the TV operation screen, use  to adjust the volume.

Watching TV(1Seg) in Viewfinder Position

When the standby screen is displayed, hold down  for at least one second.








➔ Set CA001 to Viewfinder position.

See page 8 on how to set CA001 to Viewfinder position.


➔ Tap the screen when the cell phone is horizontal.

The Touch buttons are displayed on the screen. The Touch buttons will be hidden if you do not tap any of the Touch buttons or you do not perform any operation on the touch panel for about ten seconds.



Touch Button	Function
	Change the channel to the tapped channel.
	Adjust the volume by tapping   after tapping  .
Touching and holding 	Start recording. <ul style="list-style-type: none"> Touch and hold  while recording to stop recording.
	Show/Hide the information on the screen.
	Exit au Media Tuner.

When the Touch buttons are not displayed on the screen, you can operate the TV (1Seg) by tapping or sliding a finger upward, downward, leftward and rightward on the screen.

Operation	Function
Tapping the screen	Display the Touch buttons.
Tapping the screen twice quickly	Use this instead of  .
Sliding a finger upward on the screen	Turn the volume up.
Sliding a finger upward and holding on the screen	Keep turning the volume up.
Sliding a finger downward on the screen	Turn the volume down.
Sliding a finger downward and holding on the screen	Keep turning the volume down.
Sliding a finger leftward/rightward on the screen	Changing the channel.
Sliding a finger rightward/leftward and holding on the screen	Changing the channel. <ul style="list-style-type: none"> The channel will not be changed continuously by holding the finger on the screen.

- When you tap the screen while watching TV (1Seg) in vertical Viewfinder position, the cursor buttons appear. See "Operating CA001 by Tapping the Screen" (page 17) on information about the Cursor buttons.

Exiting the au Media Tuner

Press , use  to select はい (YES) and then press .














In Case of Loss of Your CA001




 






 


The Remote Ctrl Lock allows you to remotely activate the Auto Lock, FeliCa Lock, and Address Book Lock, preventing others from using your cell phone.

Setting Conditions for Activating the Remote Ctrl Lock

You can activate the Remote Ctrl Lock by calling your CA001 a set number of times from a registered phone number within a specified period of time.

When the standby screen is displayed, press .

- ➔ Use  to select *Function* and then press  (Select).
- ➔ Use  to select *Privacy/Rstr* and then press  (Select).
- ➔ Use  to select *Security Lock* and then press  (Select).
- ➔ Use  to select *Rem. Ctrl Lock* and then press  (Select).
- ➔ Enter Lock No., and then press  (OK).
- ➔ Use  to select *Valid No.* and then press  (Select).
- ➔ Use  to select *[Register New]* and then press  (Select).

- ➔ Use  to select *Direct Input*, press  (OK), enter a phone number, and then press  (OK).
- ➔ Press  (Comp).
- ➔ Use  to select *Duration (min)* and then press  (Select).
- ➔ Enter a time and then press  (Set).
 - This sets the time limit for receiving the set number of calls after the first call is received.
 - You can set a time from one to ten minutes.
- ➔ Use  to select *No. of Incm*, and then press  (Select).
- ➔ Enter a number of calls, and then press  (Set).
 - This sets the number of calls to receive to activate the Remote Ctrl Lock.
 - You can set a number of calls from three to ten.
- ➔ Press  (Save).
- ➔ Use  to select *YES* and then press  (OK).

Remotely Activating the Remote Ctrl Lock on Your CA001

Call the CA001 from the registered phone number repeatedly within the set time limit.

- When the specified number of calls are received, the Remote Ctrl Lock is activated and a message plays telling you that the cell phone is locked.

Activating the Remote Ctrl Lock by the Security Lock Service

Even if the Remote Ctrl Lock is not set in advance, the Remote Ctrl Lock can be activated by calling au Customer Service Center or completing the application process on au Customer Support from a PC.


The Security Lock Service is available free of charge.

- You must fill out an application to use au Customer Support (the application can be filled out even after your cell phone is lost).

■ Calling au Customer Service Center to Activate/Cancel the Remote Ctrl Lock

From an au cell phone: 113 without a prefix (toll free)

From any other cell phone or fixed-line phone:

 0077-7-113 (toll free)

Open 24 hours










 
Follow the voice guidance to complete the application process.






■ Activate/Cancel the Remote Ctrl Lock from a PC


Login to au Customer Support (<http://cs.kddi.com/>) and complete the application process by following the on-screen instructions.

- The Remote Ctrl Lock cannot be activated when the CA001 is turned off or out of the service area, or Emission OFF is set to *ON*.

Troubleshooting

Symptom	Possible Cause	Remedy	Page
Cannot turn on power.	● Is the battery pack charged?	Charge the battery pack.	9
	● Did you hold down  for at least a few seconds?	Hold down  for at least a few seconds.	11
Cannot make calls.	● Is power turned on?	Hold down  for at least a few seconds.	11
	● Is  (out of range indicator) displayed?	Move to a location where  (out of range indicator) is no longer displayed, and try again.	11
	● Is your hand or a metal object covering the area around the built-in antenna?	Make sure your hand or any other metal object is not covering the area around the built-in antenna.	7
	● Did you enter the phone number starting with the area code?	When making a call to a phone other than a cell phone, you need to enter the area code even if you are inside the same area.	21
Cannot receive calls.	● Is  (out of range indicator) displayed?	Move to a location where  (out of range indicator) is no longer displayed.	11
	● Is power turned on?	Hold down  for at least a few seconds.	11
No response when a key is pressed.	● Is power turned on?	Hold down  for at least a few seconds.	11
A warning tone sounds and power turns off.	● Is there enough power left in the battery pack?	Charge the battery pack.	9
Calls are answered automatically.	● Is Answer memo turned on?	Hold down  for at least one second to turn off Answer memo.	25

Symptom	Possible Cause	Remedy	Page
Cannot hear the other party.	● Is the earpiece volume too low?	Press  during a call to increase the earpiece volume.	23
When making a call, a beeping sound is heard from the earpiece and a connection cannot be established.	● Is  (out of range indicator) displayed? Or are you in a location where the signal is too weak?	Move to a location where  (out of range indicator) is no longer displayed.	11
	● Is the wireless line busy or is the phone you are calling on another line?	End the call and try again later.	21
The LED display flashes but the ring tone does not play.	● Is manner mode turned on?	Hold down  for at least one second to turn off manner mode.	23
	● Is  (ring tone off indicator) displayed?	Increase the volume of the incoming call ring tone.	24
Cannot charge the battery pack.	● Are the plug and connector of the common AC adapter 01/02 (sold separately) inserted properly?	Insert the plug and connector firmly.	9
	● Is the battery pack installed correctly?	Correctly install the battery pack.	
When the camera is activated, no subject is displayed.	● Is a finger or other object covering the camera lens?	Check the position of the camera lens and remove the obstacle.	37

- For more detailed information, visit the following au troubleshooting sites:
 - From an au cell phone:  ⇒ *au one Top* ⇒ *auお客様サポート* (au Customer Support) ⇒ *オンラインマニュアル* (Online Manual) ⇒ *故障診断Q&A* (Troubleshooting FAQ)
 - From a PC: <http://www.kddi.com/customer/service/au/trouble/kosho/index.html>

Index

Numeric

1Seg 48

A

Accessories 6
Alert window 11
Answer memo 25
 Playback 25
 Turning off 25
 Turning on 25
au one Gadget 43
 Gadget setting icon 43

B

Battery level 12
Battery pack 6,9
Battery pack/cover 7

C

Camera 37
 Photo taking tips 37
 Taking a photo 37
Cell phone etiquette 2
Character input 27
 Character entry modes 27
 Deleting characters 28
 Entering characters from the same key 28

 Starting a new line 28
Charging the battery pack 9
Checking charges 42
C-mail 36
 C-mail safety block 36
 Creating and sending 36
 Reading received mail 36
Contents 4

D

Disaster Message Board Service 3
Display 7,12
Domain 15
Downloading Chaku-Uta® 42
Downloading Chaku-Uta-Full® 42

E

Earpiece volume 23
E-mail 33
 Creating and sending 33
 Initial settings 11
 Reading 34
 Received mail 34
 Replying 34
 Viewing attached images 34
E-mail address 11
 Available characters 27
 Changing 15
 Entering 28

Entering pictograms	29
Evacuate Navi	47
EZ Navi	45
EZ Navi Walk	46
EZ News Flash	43
Canceling	44
Changing the Reception Settings	44
Info pane	43
Setting	43
Ticker field	43
EZ password	16
EZweb	39
Accessing sites	40
au one Top	40
Basic operations	41
Initial settings	11

G

Global Functions	26
Setting Area	26

I

Incoming history	23
Indicators	12
Initial settings	11,49
au Media Tuner	48
E-mail · EZweb	11
TV (1Seg)	48
International Call	21
Internet	39
Sites	40,41

K

Key assignments	10
-----------------------	----

L

Language	11
Learning the basics	10
LED display	13
Lock No.	16

M

Mail	33
C-mail	36
E-mail	33
Mail filters	35
Simple settings	35
Main menu	13
Manner mode	23

N

Names of parts	7
----------------------	---

O

One-ring calls	23
Outgoing history	23

P

Pair Function	32
Making a call to a pair partner	32

Registering a pair partner	32
Sending mail to a pair partner	32
Passenger Seat Navi	45
Passwords	16
Phone (call)	21
184/186	21
Answering	22
International Call	21
Making	21
Returning	23
Phone book	30
Dialing	30
Editing	30
Saving	30
Saving a phone number from the incoming or outgoing history	31
Phone number	11
Photos	37
Photo modes	37
Taking	37
Viewing	38
Playback	
Answer memo	25
Position of CA001	8
Premium EZ password	16

R

Remote Ctrl Lock	52
Ring tones	
Changing the type	24
Changing the volume	24

S

Security code	16
Security Lock Service	53
Security Navi	45
Signal strength	12
Simple menu	14
Sites	39
Bookmarking	41
Viewing from bookmarks	41
Spam	35

T

Touch menu	20
Troubleshooting	54
Turning on/off power	11
TV (1Seg)	48
Antenna	48
Basic operations	50
Changing channels	49
Exiting	51
Initial settings	49

V

Viewing	
Photos	38

For inquiries, call: au Customer Service Center

For general information and charges (toll free)

From fixed-line phones:

 0077-7-111

From au cell phones:

157 area code not required

PRESSING ZERO WILL CONNECT YOU TO AN OPERATOR
AFTER CALLING 157 ON YOUR au CELL PHONE

For loss, theft or damage and operation information
(toll free)

From fixed-line phones:

 0077-7-113

From au cell phones:

113 area code not required

From EZweb:

Access Method

EZ ▶ au one Top ▶ auお客さまサポート (au Customer Support)
▶ お問い合わせ (Inquiries)
▶ Menu are subject to change without prior notice.

なるほど! au
みんなでつくる、auQ&Aサイト

Access Method

EZ ▶ au one Top ▶ auお客さまサポート (au Customer Support)
▶ みんなでQ&A「なるほど! au」 (au User's Forum)

Read this code for an easy
access to みんなでQ&A
「なるほど! au」 (au User's
Forum).

- The packet communication charge applies.



モバイル・リサイクルネットワーク
環境省 資源循環センター

Cell phone and PHS operators collect and recycle unused
telephones, batteries and battery chargers at stores
bearing the ♻️ logo regardless of brand and manufacturer
to protect the environment and reuse valuable resources.

Read this code for
an easy access to
au Online Manual.



BMN6450YAA-1
January 2009, 1st Edition

Sales: KDDI CORPORATION・
OKINAWA CELLULAR TELEPHONE COMPANY
Manufactured by: CASIO COMPUTER CO.,LTD.